

Exhaust Servo Eliminator Supplementary Manual


BMW S1000RR ABS TC 2019- (ESE-BM1)

Secure the bike on a stand.




Locate the exhaust servo motor.

(At the right footpeg)

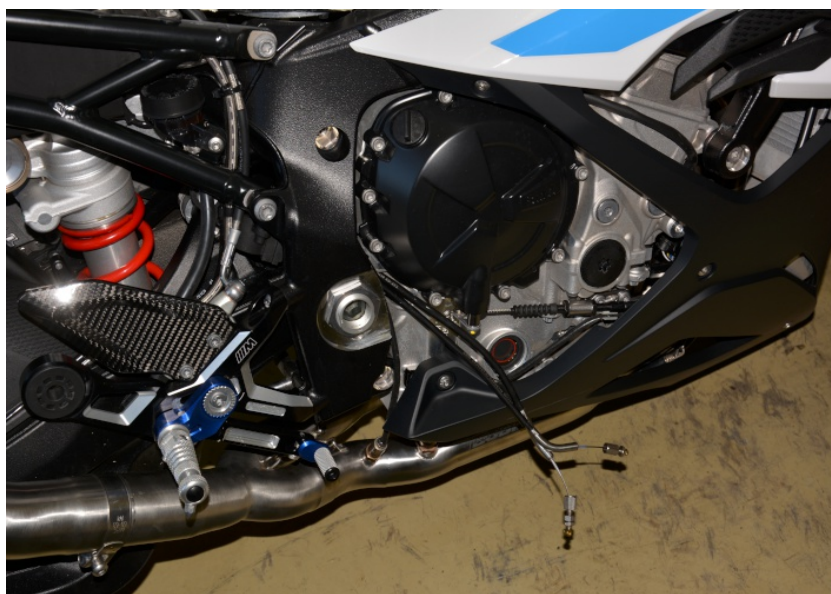

Unplug the exhaust servo motor
connector and remove the exhaust servo
motor.

(Black, 4-pole connector)

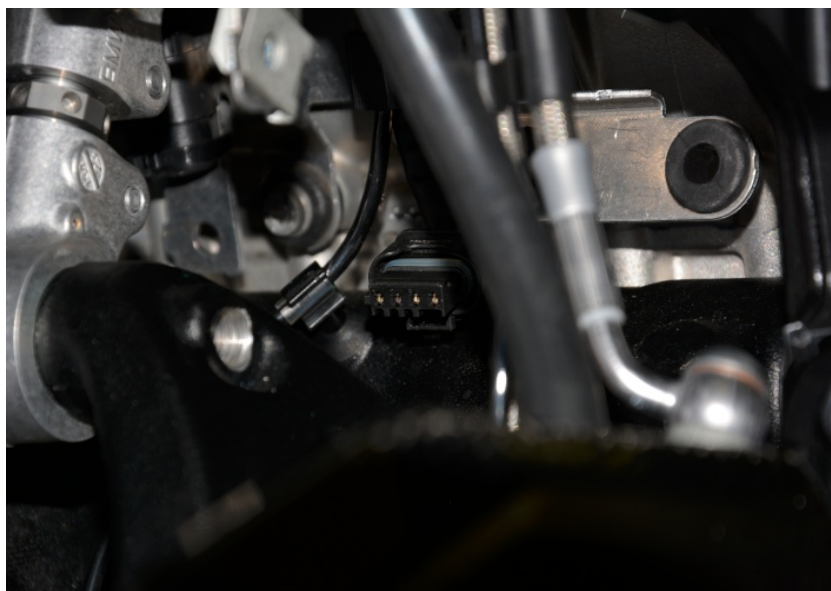

Exhaust Servo Eliminator Supplementary Manual



BMW S1000RR ABS TC 2019- (ESE-BM1)

Plug the ESE connectors to the exhaust servo motor connectors.

Secure the unit properly.

