

Exhaust Servo Eliminator Supplementary Manual



BMW S1000RR 2015-2018 (2pcs ESE-BM1)

Remove the the left side fairings.

Locate the Exhaust Servo motor.

Unplug the Exhaust Servo motor connector.

Remove the Exhaust Servo motor completely.


(Black, 4-pole connector)



Plug the ESE module to the 4-pole bike harness connector.

Typical position for the 1st Exhaust Servo Eliminator.

Secure the unit properly.

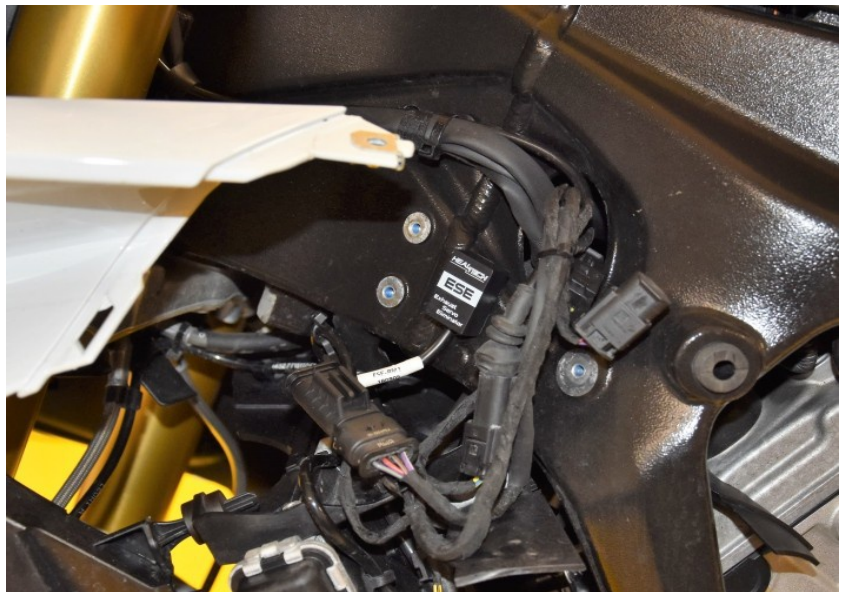

Locate the 2nd Exhaust Servo motor.

Unplug the Exhaust Servo motor connector.

Remove the Exhaust Servo motor completely.

(Black, 4-pole connector near the rear swingarm)



Exhaust Servo Eliminator Supplementary Manual



BMW S1000RR 2015-2018 (2pcs ESE-BM1)

Typical position for the 2nd Exhaust
Servo Eliminator.

Secure the unit properly.

