

# QuickShifter easy Supplementary Manual



## BMW R nineT Urban GS 2017- (iQSE-1 + QSH-F2D)

Secure the bike on a stand.



Remove the seat.


Remove the left and right side covers.

Lift up or remove the fuel tank.



Locate the fuel injector connectors.

*(Black, 2-pole connectors.)*

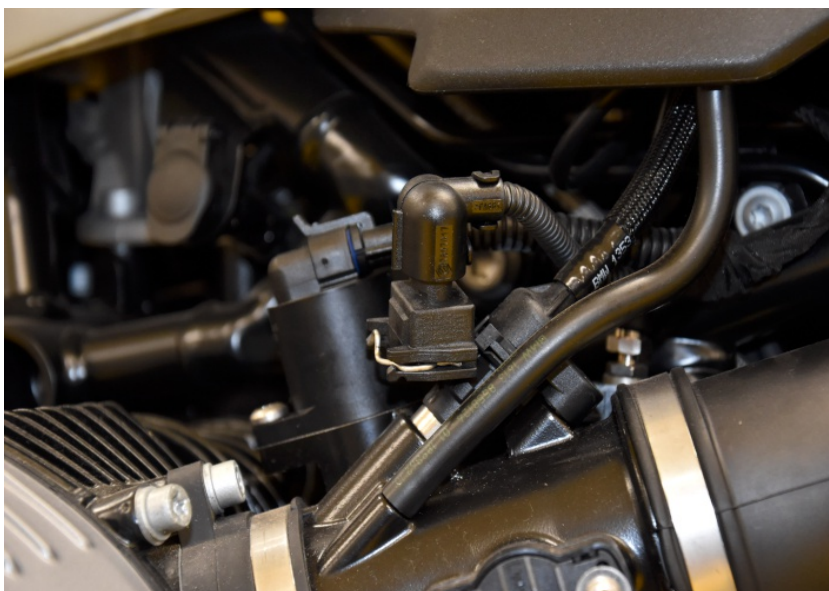


# QuickShifter easy Supplementary Manual



## BMW R nineT Urban GS 2017- (iQSE-1 + QSH-F2D)

Plug the QSH connectors in-line with the fuel injector connectors.

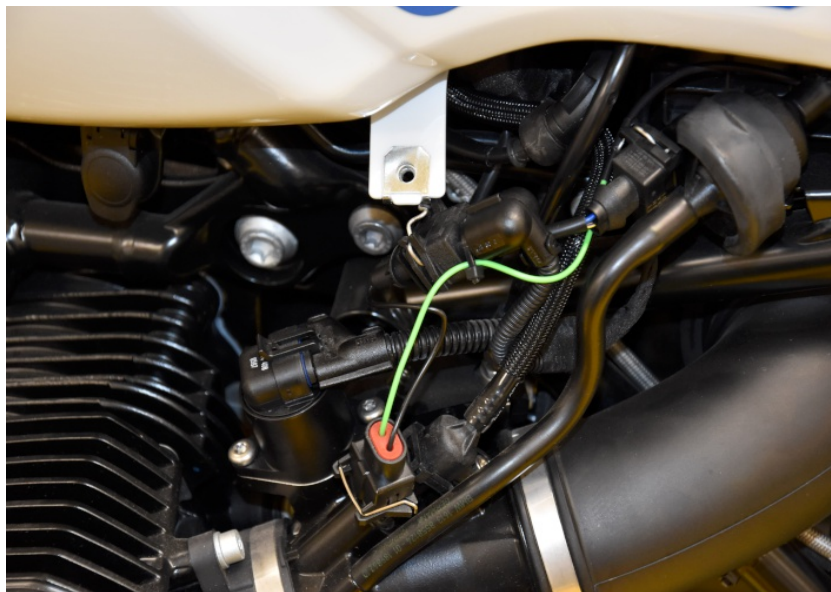

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

*(Replace the bolt with the one supplied.  
Place the conical washers at the two sides  
of the sensor like this: (O). Tighten the bolt  
in this position by about 6 Nm. If you do not  
have torque wrench, tighten the bolt until  
the shift arm is tight on the gearbox shaft.)*



# QuickShifter easy Supplementary Manual



## BMW R nineT Urban GS 2017- (iQSE-1 + QSH-F2D)

Typical position for the QuickShifter easy.

Secure the unit properly.

