

QuickShifter easy Supplementary Manual



Ducati Monster 1100 2009-2013 (iQSE-1 + QSH-F2D)

Secure the bike on a stand.



Remove the seat.

Remove the covers from the fuel tank.


Remove the fuel tank.



Locate the fuel injector connectors under the airbox.

Plug the QSH connectors in-line with the fuel injector connectors.

(Black, 2-pole connectors)

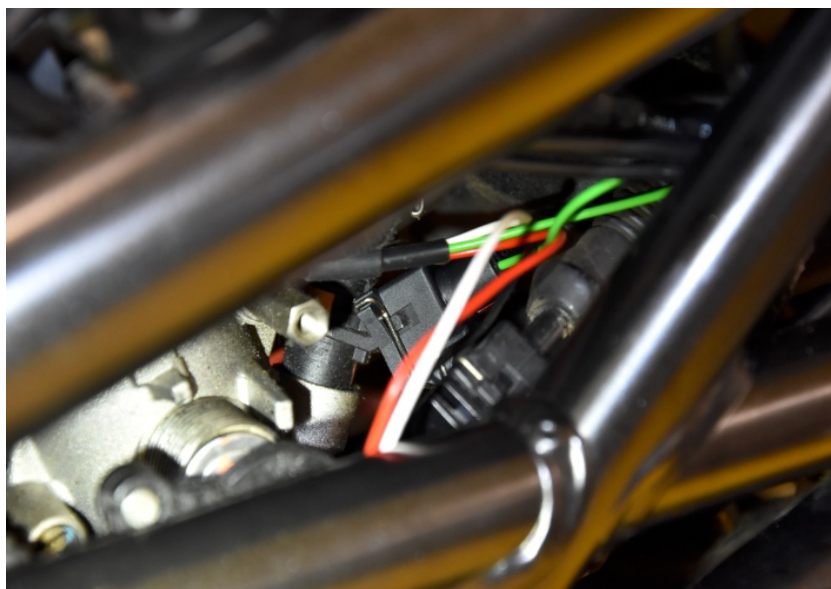

QuickShifter easy Supplementary Manual



Ducati Monster 1100 2009-2013 (iQSE-1 + QSH-F2D)

Connect the QSH Black wire terminal to the chassis ground.



Mount the QSE sensor.

(Replace the bolt with the one supplied. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

